



Priručnik: Trionic kabelska brava



① Pronađite vijak na nosaču.



② Odvrnite vijak imbus ključem od 4 mm.



③ Izvucite kraj remena iz nosača.



④ Omotajte remen oko stražnje vertikalne cijevi okvira Veloped bicikla (na Walkeru, oko poluvertikalne cijevi okvira).




⑤ Umetnite kraj trake u nosač.



⑥ Zategnite vijak/remen imbus ključem od 4 mm dok se remen ne zategne.



⑦ Prekomjernu duljinu remena odrežite rezačem kabela ili nožem.

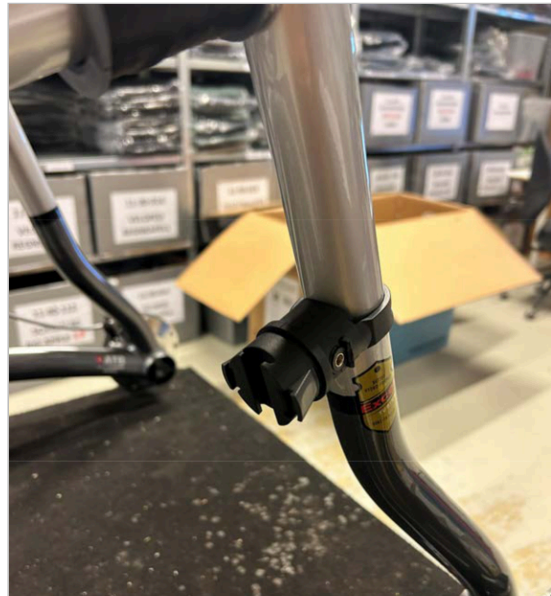

⑧ Fotografija prikazuje ispravno pričvršćivanje nosača.



⑨ Pričvrstite kabelsku bravu na nosač odozgo, gurnite kabelsku bravu prema dolje dok ne klikne u nosač.



⑩ Za odvajanje kabelske brave od nosača, pritisnite dva siva gumba i uklonite bravu s nosača.